


Fitting Instructions Eleco 23/24

1. Clean floor surface, remove any lumps or old underlay, nails etc.
2. Seal any holes in floor with mastic particularly around floor edge.
3. Apply Isolation tape around bottom edge of lower wall perimeter.
4. Lay [Acoustic Flooring](#) boards up to Isolation tape.
5. Stagger boards brick work fashion and glue edges.
6. Cover whole room and fill in gaps with off cuts of boards.
7. Leave 5mm gap around pipes and seal with mastic.
8. Fit skirting onto perimeter strip and fix to wall, then trip perimeter strip as required
9. **Do not Nail or screw into these boards**
10. Relay carpet and underlay or vinyl as normal.

CAN BE LAID ONTO TIMBER OR CONCRETE FLOORS

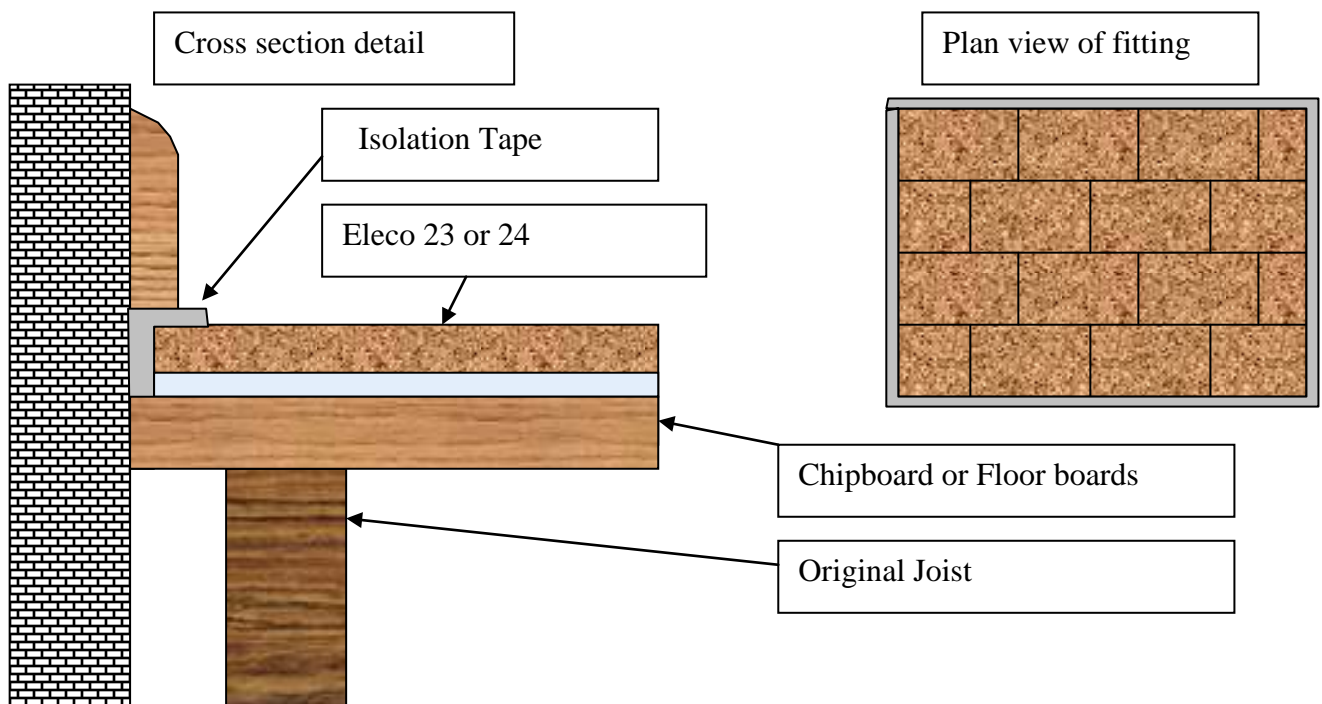

DO NOT NAIL OR SCREW THROUGH THESE BOARDS INTO JOISTS