


Deck 18 Fitting Detail

Please find below detailed fitting instructions for Deck 18 Acoustic Floating Floor as requested today

1. Clean floor surface, remove any lumps or old underlay, nails etc.
2. Seal any holes in floor with mastic particularly around floor edge.
3. Apply Isolation tape around bottom edge of lower wall perimeter.
4. Lay Acoustic Flooring boards up to Isolation tape.
5. Stagger boards brick work fashion and glue edges.
6. Cover whole room and fill in gaps with off cuts of boards.
7. Leave 5mm gap around pipes and seal with mastic.
8. Fit skirting onto perimeter strip and fix to wall, then trip perimeter strip as required
- 9. Do not Nail or screw into these boards**
10. Relay carpet and underlay or vinyl as normal.

CAN BE LAID ONTO TIMBER OR CONCRETE FLOORS

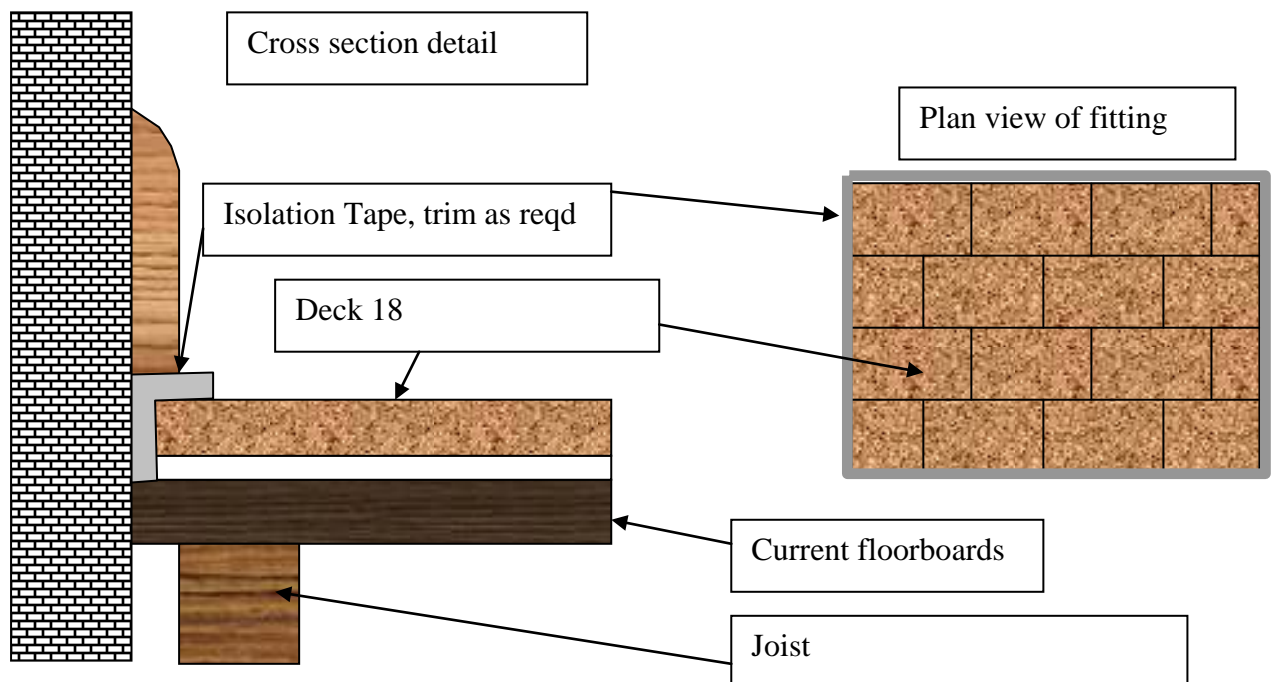

Please note, the success of any acoustic system, will depend entirely on the construction of the existing building and finishing detail, to the extent that we can not guarantee the level of noise reduction that will actually be achieved. It is the clients responsibility to check the quantities of [acoustic materials](#) ordered are correct as shortages will have to be paid for separately and to check with Local Building Control on actual testing requirements.