


## ScreedBoard 28 Fitting Instructions

1. Re-plaster walls down to chipboard flooring and plug all large holes with mineral wool
2. Apply Isolation tape around bottom edge of wall (re-plaster wall edge if required).
3. Lay Screedboard 28 Acoustic Flooring boards up to Isolation tape.
4. Stagger boards brick work fashion and glue edges.
5. Cover whole room and fill in gaps with off cuts of boards.
6. Leave 5mm gap around pipes and seal with mastic.
7. Sit skirting onto tape and trim tape as required
8. Floor must end up water tight!!
9. Fit Carpets and underlay as normal

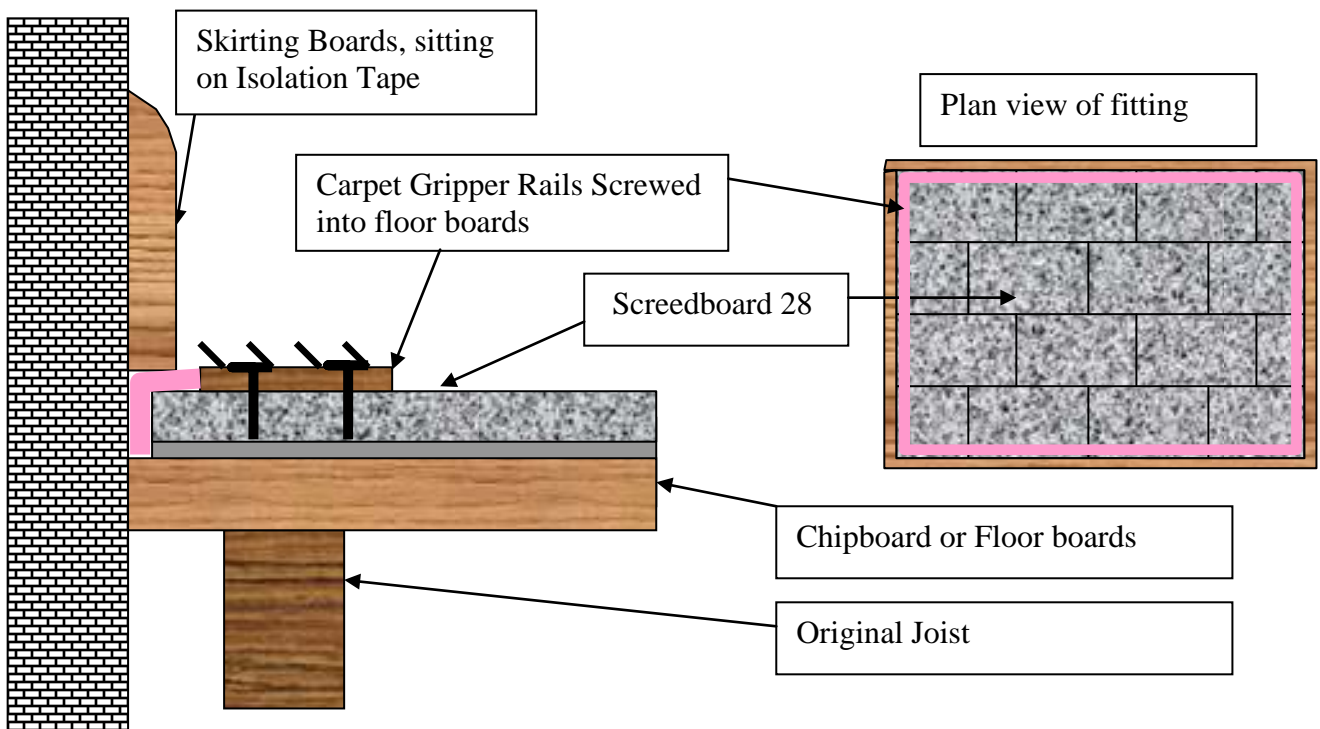

### Tools Required

1. Work Bench
2. Electric Jigsaw and rough cut blades
3. Silicon Sealant and gun
4. Tape measure
5. Straight edge

Please note, the success of any acoustic system, will depend entirely on the construction of the existing building and finishing detail, to the extent that we can not guarantee the level of noise reduction that will actually be achieved. It is the clients responsibility to check the quantities of [acoustic materials](#) ordered are correct as shortages will have to be paid for separately and to check with Local Building Control on actual testing requirements.