


SoundMat 15 Fitting Instructions

1. Glue + Screw any loose flooring directly into joists and seal ALL gaps with Sealant
2. Lay 12mm Acoustic Mat onto chipboard right upto Skirting and seal around edge with sealant
3. Stagger boards brick work fashion seal all gaps
4. Cover whole room and fill in gaps with off cuts of mats.
5. Leave 5mm gap around pipes and seal with sealant.
6. Fix Gripper rails about 10mm in from skirting
7. Overlay this with underlay and carpets in normal way

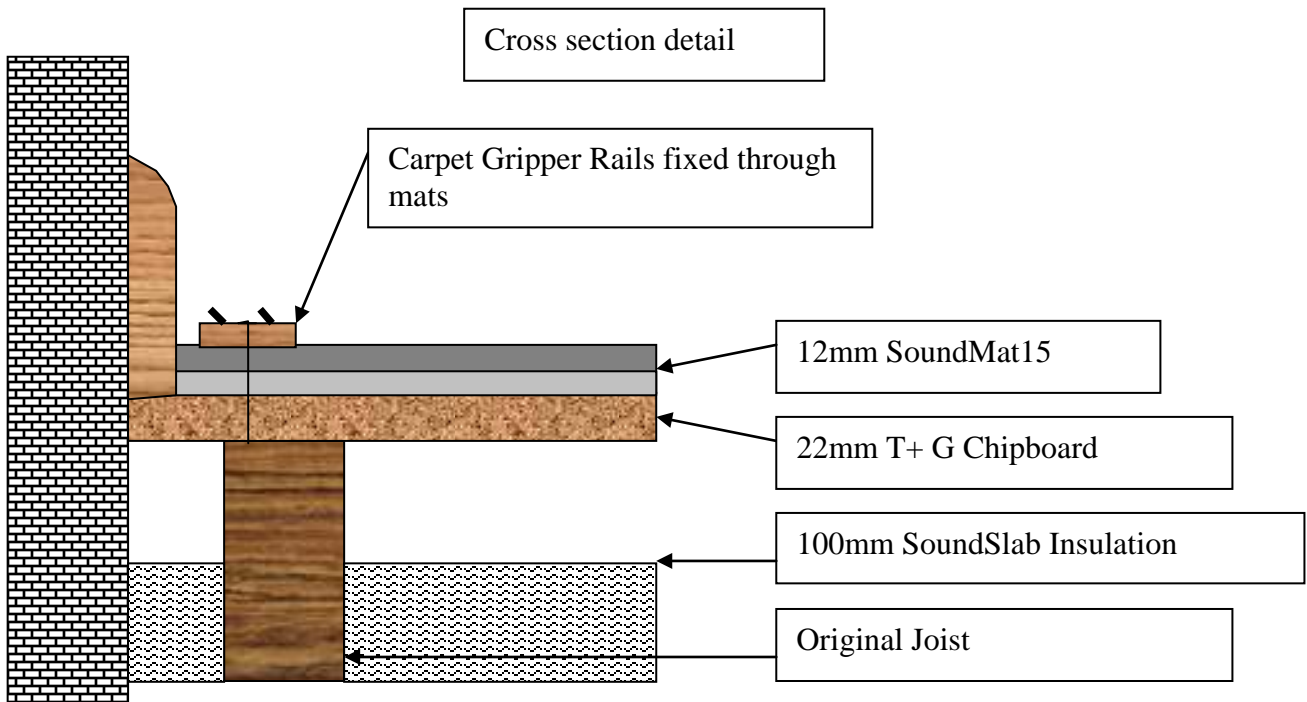

Please note- You are advised not to directly overlay the product with Laminate / Engineered flooring.

Tools

Safety gloves and goggles, Electric Jigsaw, Handsaw, Marker Pen, Work bench, Tape measure, straight edge, Sealant gun, and tubes of sealant.

Please note, the success of any acoustic system, will depend entirely on the construction of the existing building and finishing detail, to the extent that we can not guarantee the level of noise reduction that will actually be achieved. It is the clients responsibility to check the quantities of [acoustic materials](#) ordered are correct as shortages will have to be paid for separately and to check with Local Building Control on actual testing requirements.